


VOLVO
9700
DRIVER'S GUIDE



WHEELCHAIR LIFT REMOTE

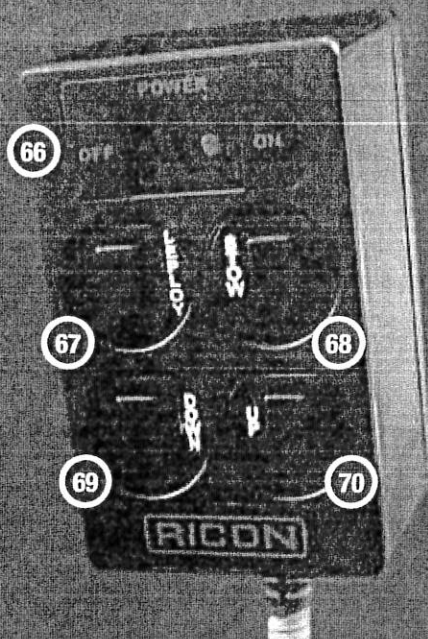

- 66 POWER ENABLE SWITCH**
Provides power to the pendant and thereby enables the lift.
- 67 DEPLOY**
Platform moves outward from lift compartment.
- 68 STOW**
Platform moves downward toward stow level and then retracts into lift compartment. If platform is below stow level, it must first be raised above stow level.
- 69 DOWN**
Platform lowers toward ground level. Bridgeplate automatically rises when platform drops below floor level.
- 70 UP**
Platform rises toward vehicle floor level. Bridgeplate automatically lowers when platform arrives at floor level.

OPERATING THE WHEELCHAIR LIFT

DEPLOY PLATFORM

Press and hold **DEPLOY** button until platform is completely extended from lift compartment.

NOTE: Platform cannot be moved up or down unless platform is fully extended.

Unlatch each handrail by pushing downward and then swinging outward by hand.

Pull out on top edge of platform to release magnetic latch and lower platform sections to horizontal position; weight of platform is spring assisted.

Unfold front platform section by grasping handle provided.

Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.

LOWER PLATFORM

Press and hold **DOWN** button until platform contacts ground. Verify that bridgeplate is in upright position.

Lift front rollstop out of slots and swing forward until it rests on ground.


Carefully place wheelchair in center of platform, preferably facing outward (away from vehicle), and lock wheelchair brakes. Pull safety belt from retractor on handrail and fasten to other handrail.


Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.

RAISE PLATFORM

Press and hold **UP** button until platform rises and stops automatically at vehicle floor level. Verify that bridgeplate lowers to horizontal position and rests flat on vehicle floor.

Release wheelchair brakes, and carefully board passenger into vehicle.

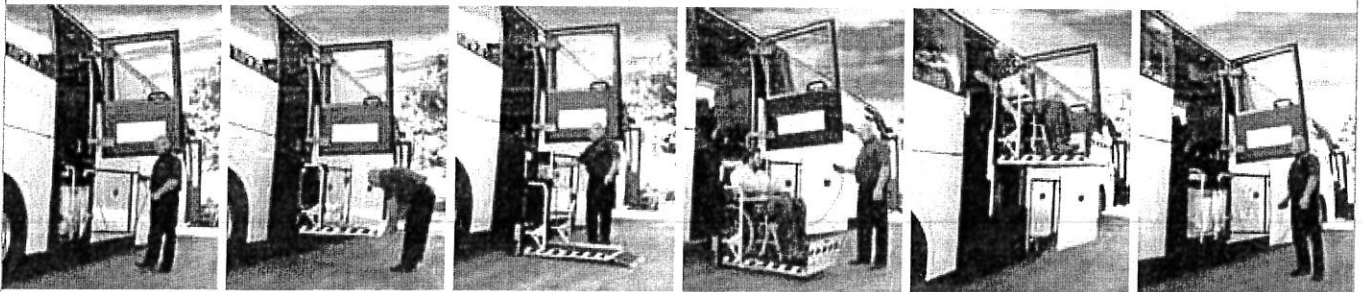

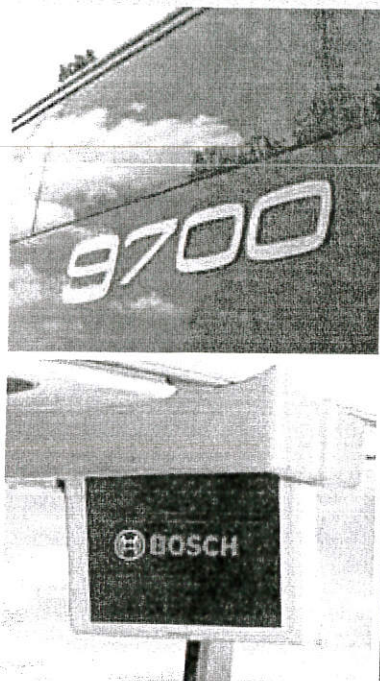

AUDIO-VIDEO DISPLAY AND CONTROL UNIT

GENERAL FUNCTIONS

- 71** ON button
- 72** CD compartment of the CCD
- 73** CD eject button (drive of the CCD)
- 74** AM button
- 75** TA button
Short press: Activate/deactivate traffic announcement priority; cancel a playing traffic announcement
Long press: Start the Travelstore function
- 76** >> button, Start seek tuning
- 77** Station buttons **1 - 6**
Short press: Select a stored station
Long press: Store a station
- 78** FM button
- 79** SCRL button
Display the contents of the display as scrolling text
- 80** << button, Start seek tuning
- 81** DVD/CD compartment of the CCS
- 82** DVD/CD eject button ▲ (drive of the CCS)
- 83** Remote buttons
- 84** ENTER button
Confirmation function in navigation, video, DVD and TV mode
- 85** MENU button
Open the main menu to configure the device's main functions
- 86** ESC button
Close menus

- 87** NAVI button
Activate the control of a connected navigation system using:
- remote buttons **83** - ENTER button **84** in the same way as the remote control of the navigation system
- 88** CAM button
Select a camera image on the driver's monitor
- 89** MON button
Activate, deactivate and/or synchronise the monitors in the cabin
- 90** MAP button
Display the navigation map display in the cabin (only when a Coach Navigation unit is connected in conjunction with a suitable driver's monitor)

DRIVER'S CONTROLS

- 91** Left control knob for the cockpit
Turn: Adjust the volume and the menu selection
Press: Open and confirm menu items
- 92** RADIO Select the radio audio source
- 93** VIDEO Select the video source (drive of the CCS and external video sources)
- 94** CD Select the CD audio source (drive of the CCD)
- 95** AUX Select the USB and AUX audio sources

PASSENGER'S CONTROLS

- 96** Right control knob for the cabin
Turn: Adjust the volume and the menu selection
Press: Open and confirm menu items
- 97** RADIO Select the radio audio source
- 98** VIDEO Select the video source (drive of the CCS and external video sources)
- 99** CD Select the CD audio source (drive of the CCD)
- 100** AUX Select the USB and AUX audio sources



Never release the park brake without the footbrake engaged!

¡Nunca libere el freno de estacionamiento sin que el pedal de freno este presionado!

Ne jamais relâcher le frein de stationnement à moins que la pédale de frein ne soit enfoncée !

VOLVO 21511437

DASH BOARD CONTROLS

MIRROR

- ① Mirror heater
- ② Rear-view mirror adjustment

LIGHTINGS


- ③ Parking brake
- ④ Lighting panel
- ⑦ Night lighting
- ⑧ Passenger's reading lights
- ⑨ Passenger's area lighting
- ⑩ Under seats night lighting
- ⑫ Driver's area lighting
- ⑬ Position light

SUSPENSION

- ⑤ Tire Pressure Monitoring System
- ⑥ Kneeling
- ⑦ Tag axle'
- ⑨ Bus level control
- ⑩ Hill start assist
- ⑪ Traction control system

GAUGES

- ⑫ Turbo boost pressure
- ⑬ Tachometer
- ⑭ Engine coolant temperature
- ⑮ Engine oil pressure

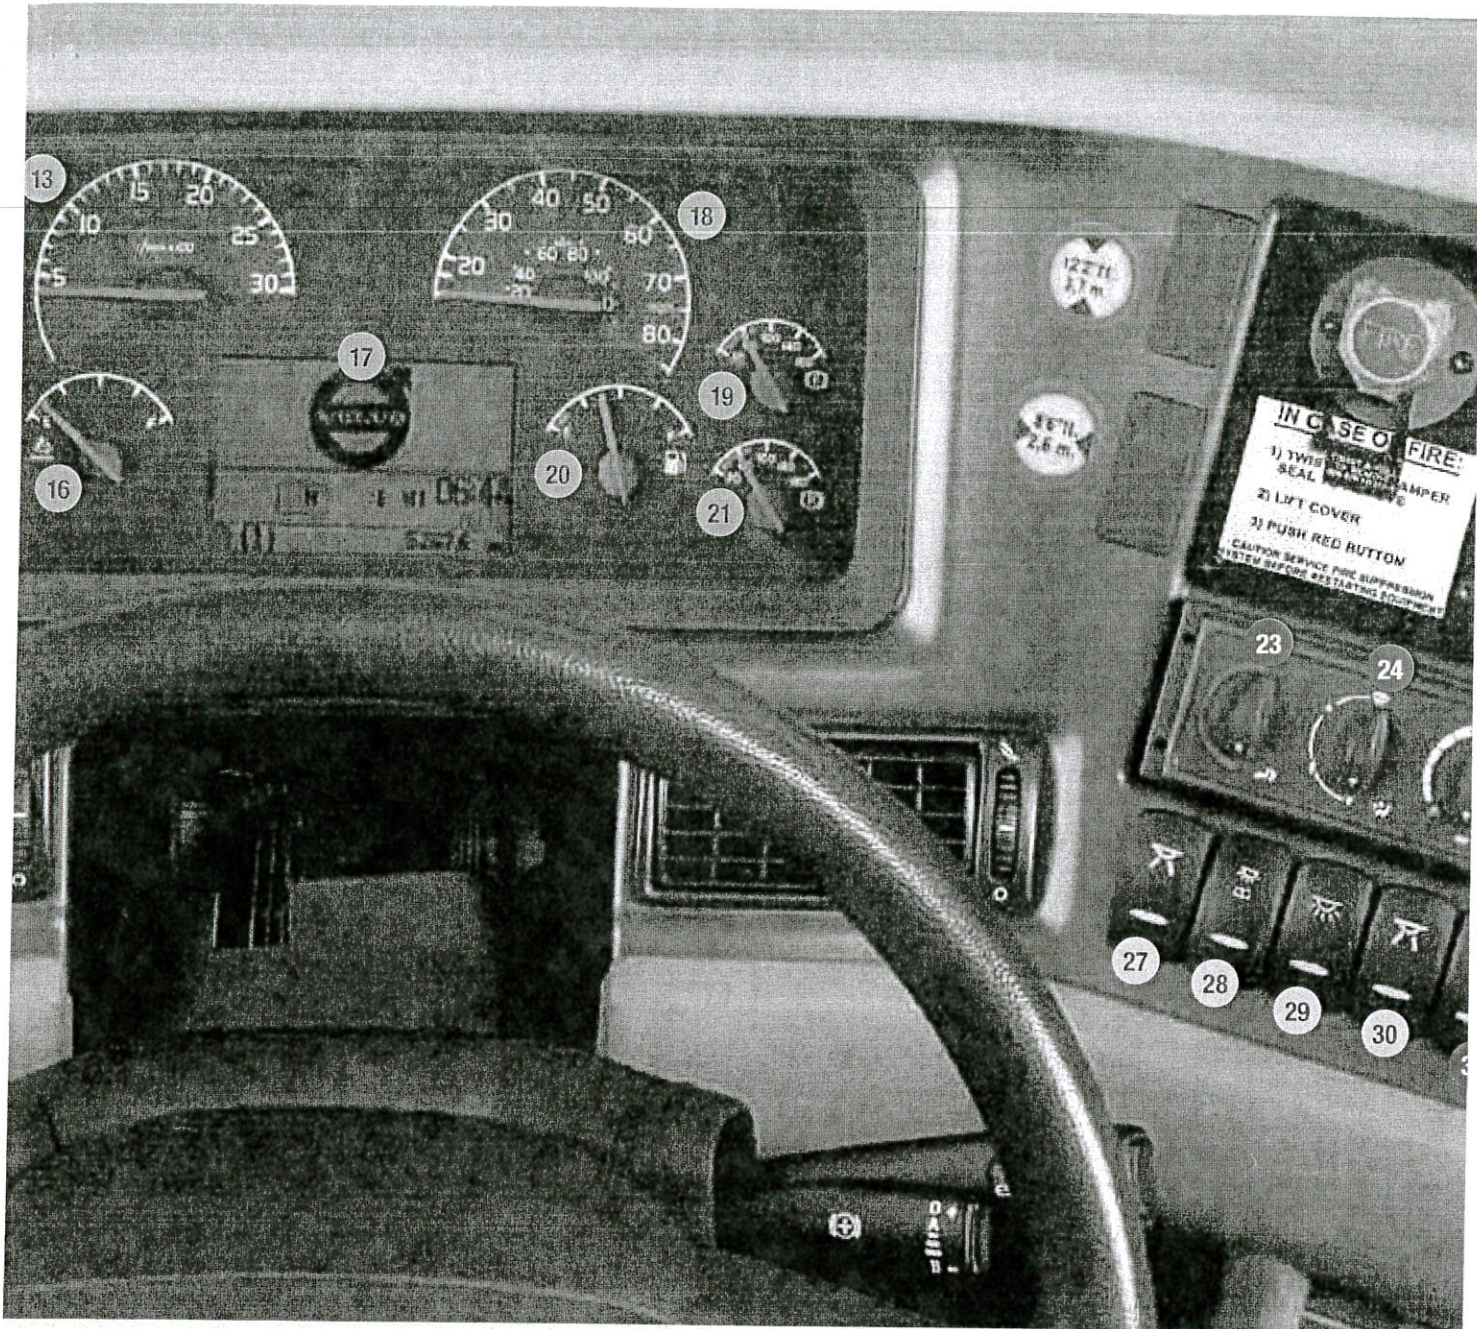

- 16 DEF (Diesel Exhaust Fluid) Level
- 17 DID (driver information display)
- 18 Speedometer
- 19 Front brake system air pressure
- 20 Fuel level
- 21 Rear brake system air pressure
- 35 Emergency window indicator light

AUDIO/VIDEO

- 36 Audio-video display unit
- 37 Audio-video control unit

CLIMATE

- 23 Temperature control, driver's area²
- 24 Air flow selector
- 25 Fan speed
- 26 Temperature control, passenger's area²
- 44 Driver's fan
- 46 Auxiliary heater display (option)

DOORS

- 31 Exterior door switch activation
- 41 Entrance door opening




WHEELCHAIR LIFT

- 38 Wheelchair lift system enable indicator light (option)
- 39 Wheelchair lift door ajar indicator light (option)
- 40 Wheelchair lift system enable switch (option)

OTHERS CONTROLS

- 8 Main battery switch³
- 22 Automatic Fire Suppression System
- 33 Front sun visor
- 34 Delay Automatic Fire Suppression System

- 43 Central locking
- 45 Lavatory activation
- 47 Clock button
- 48 Program selection button
- 49 Unit start-up button
- 50 Button to reduce the value of the selected parameter
- 51 Button to increase the value of the selected parameter

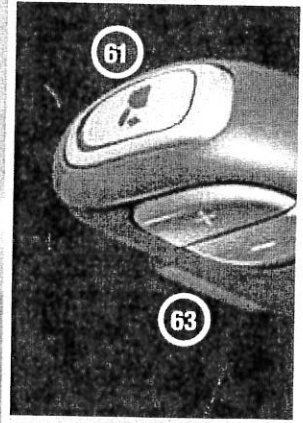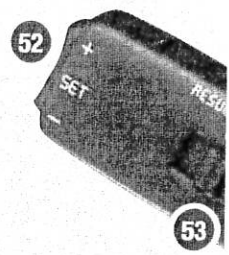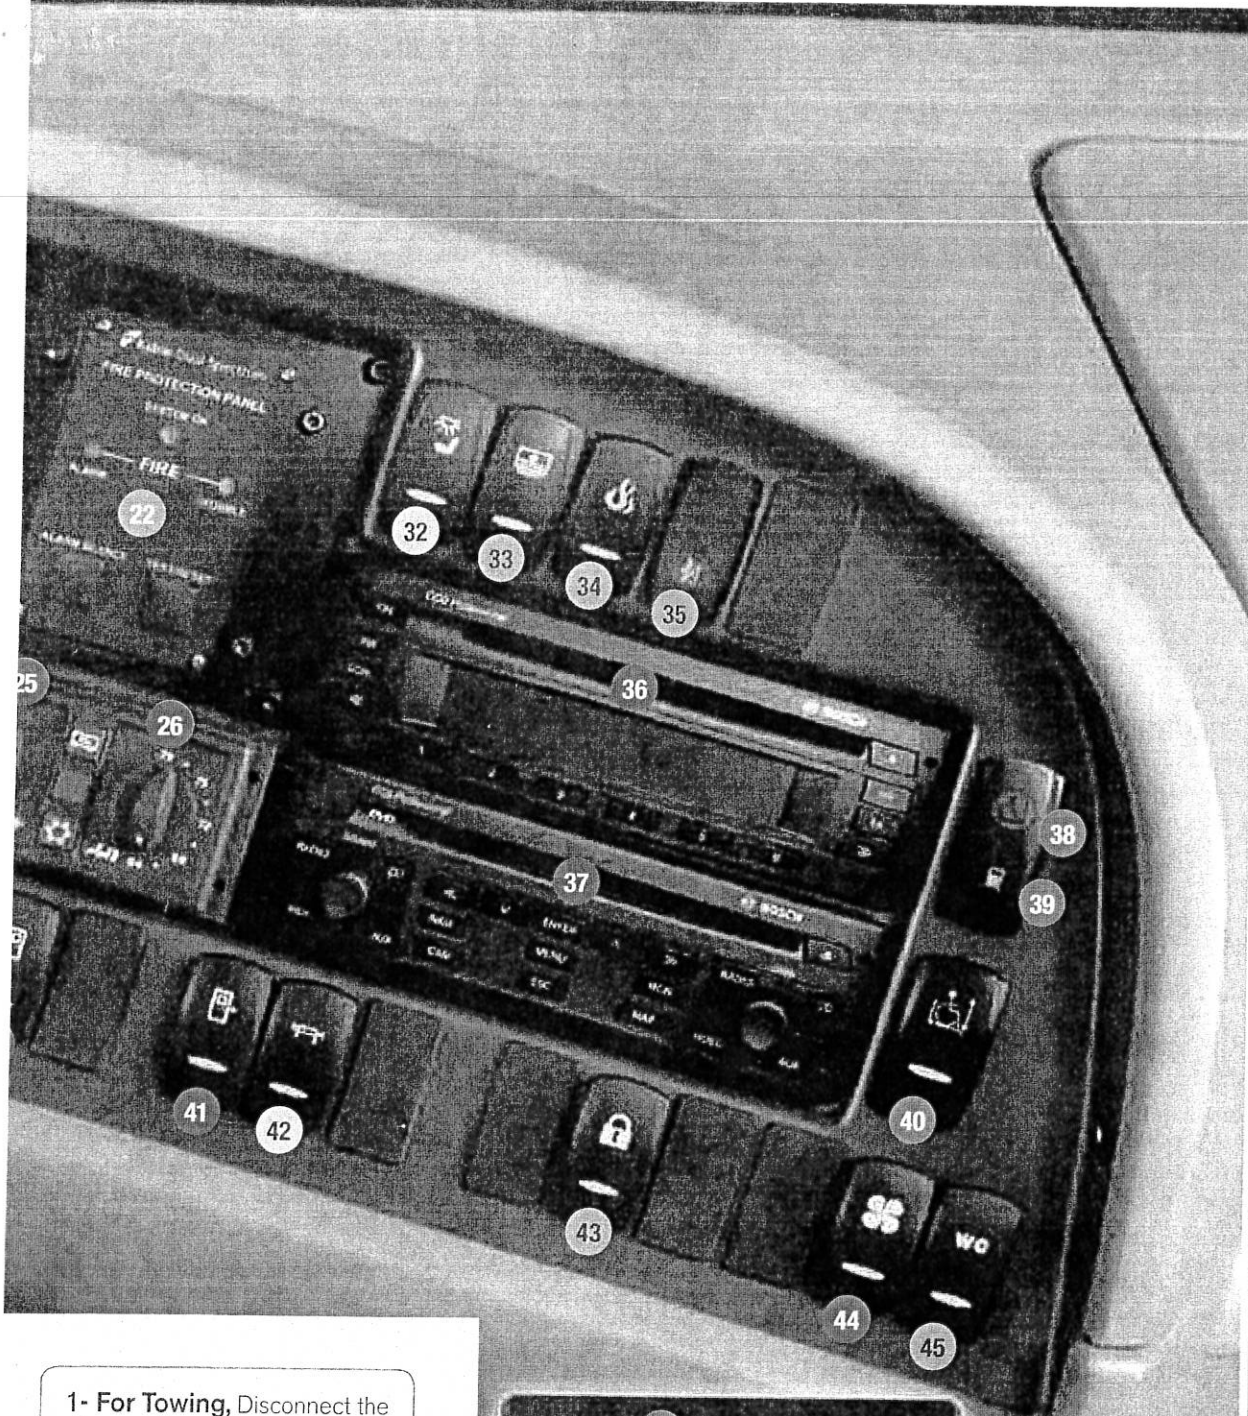

1- For Towing, Disconnect the drive axle from the transmission.
IMPORTANT: DO NOT release parking brake unless foot brake is engaged.

2- To get full AC with the door open:
 (applies to fast idle option)

1. Engage parking brake.
2. Put gearshift in neutral.
3. Door brake indicator on dashboard is then disengaged.


3- When the vehicle is not running, turn the main battery switch OFF, with the bottom of this button pushed in! If left on, the batteries will be discharged.



Auxiliary heater panel (option)
 (sits behind the dash drawer)


STEERING WHEEL WANDS

- 52 Idling speed adjust/
cruise set speed
- 53 Cruise control activation
- 54 Headlight beam toggle,
turn signal
- 55 Volvo engine brake/retarder
- 56 Braking force selector
- 57 Windshield wipers
and washers control
- 58 ESCAPE button, DID menu
- 59 ENTER button, DID menu
- 60 UP/DOWN button, DID menu

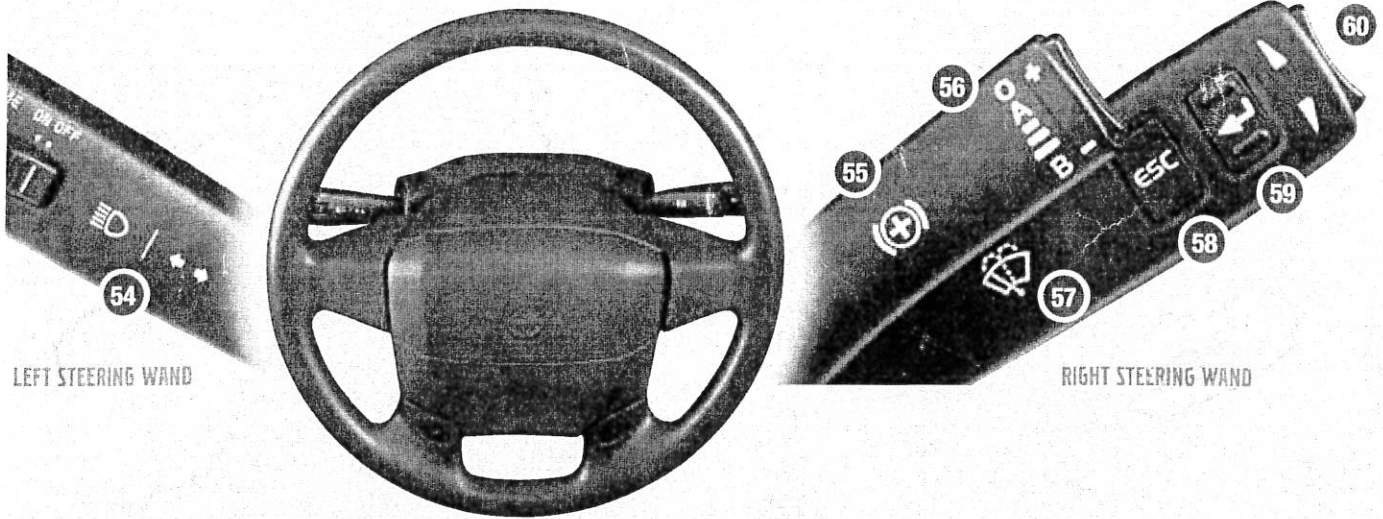

LEFT STEERING WAND

RIGHT STEERING WAND

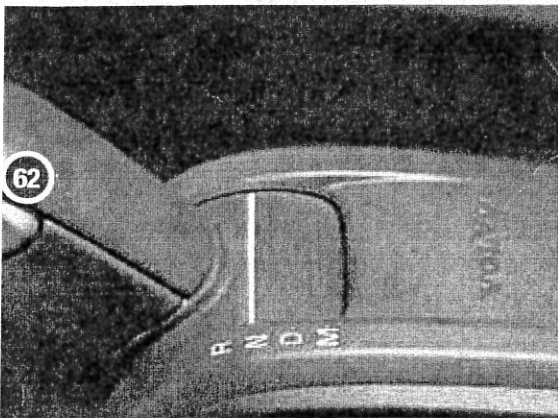

I-SHIFT

- 61 Gear selector tilt button
- 62 Manual gear selector UP/DOWN
- 63 Gear selector lock
- 64 Economy/Performance mode
- 65 Limp-home mode

